

Quick Install Guide

AA1XLPE ATT, AA1XLPE VZN, AA1XLPE INT, AA1XLPE VPN

AA1XLSM ATT, AA1XLSM VZN, AA1XLSM INT, AA1XLSM VPN

CellGate Support: 972-231-1999, opt. 3



Items Included in Kit

The following items are included in your WXL delivery.

- 1. Watchman XL Unit
- 2. 12 Volt DC Power Supply
- 3. Magnetic Read Switch
- 4. Keys

Interface

Circuit Board


Wiring Examples

Watchman XL Unit

NOTE Leave one key with the customer.

- 5. Nuts X 4
- 6. Bolts X 4
- 7. Install Guide
- 8. Customer Information Packet



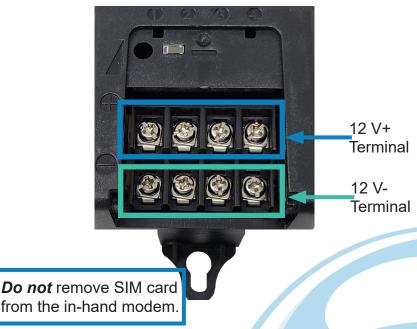



Recommended wiring: 18/6 shielded for main device, and 18/4 shielded for optional Wiegand devices.


Router

Ethernet

Switch

NOTE

Interface Circuit Board

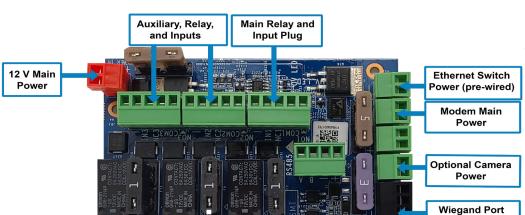

If you requested an expansion board, we installed it.

We recommend the following gauges (ga) for each distance:

- 18 ga stranded: up to 25 ft
- 16 ga stranded: up to 50 ft
- 12 ga stranded: up to 60 ft



Internet Router Connection

Product Numbers: AA1XLPE INT, AA1XLSM INT



NOTE Router supports external camera.

Plug customer Internet into the blue port

Plug Watchman into any yellow port

Plug optional external cameras into any yellow port

VPN Connection



Product Numbers: AA1XLPE VPN, AA1XLSM VPN

The VPN connection ships DHCP enabled and does not support external cameras.

In the image to the left, the black chord is the Ethernet connection.



NOTE

VPN does not support external camera.



Interface Wiring Diagram

Oriented the same as the Watchman install



12 V Input Power

Red: Positive

Black: Negative

To Magnetic Switch or Dry Contact on Operator


Gray: Negative White: Positive

To Gate Operator

Free Exit or Exit Terminal

Brown: Common Ground

Blue: Normally Open Connection

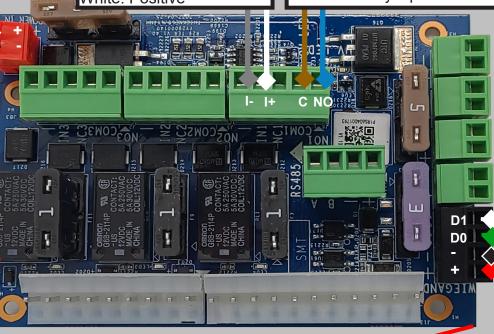

Optional Wiegand 26 Bit Connection

White: Data 1 Green: Data 0

Black: Negative


Red: Positive



1. Wire main power from the transformer to the power connector on the circuit board.

 Connect gate trigger wires from the Normally Open (NO) and Common (C) to the free-exit or exit terminals on the gate operator.


- 3. Connect the gate status wires on the 6-pin connector on the main relay and input plug to the magnetic switch or a Dry Contact, Normally Closed (NC) relay on the gate operator.
- 4. If using an optional 26-bit reader (keypad, card reader, RFID, or clicker), wire the device to the Wiegand connection on the interface circuit board.
- 5. Use Camera Guide if adding optional external camera.
- 6. Test/activate using the test credentials on the Activation & Test
 Process document.

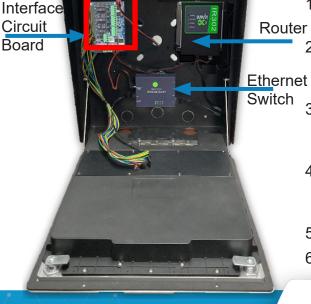






Wiring with Transformer

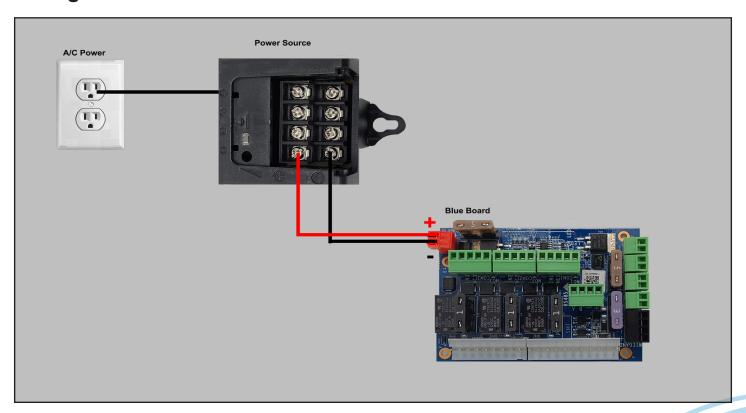

Wiring for Solar Power

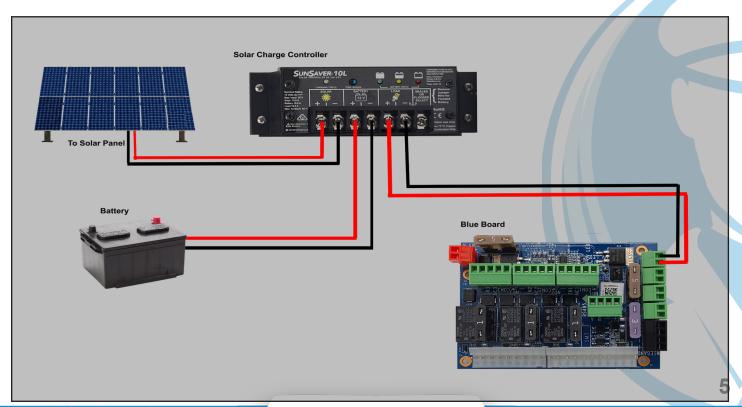







Dry Contact Relay, Normally Open Dry Contact

No Voltage to Lock or Gate

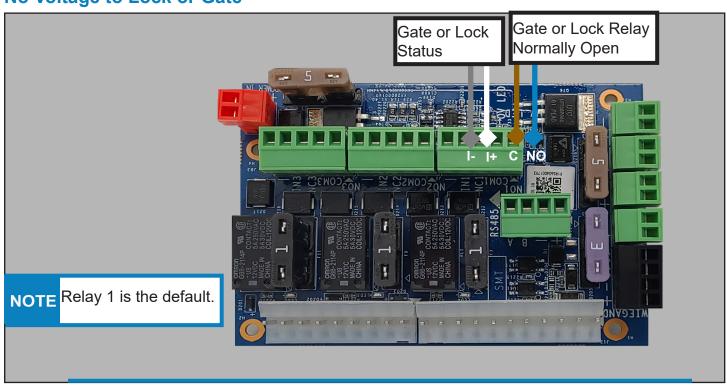


Dry Contact Relay, Normally Closed Dry Contact No Voltage to Lock or Gate

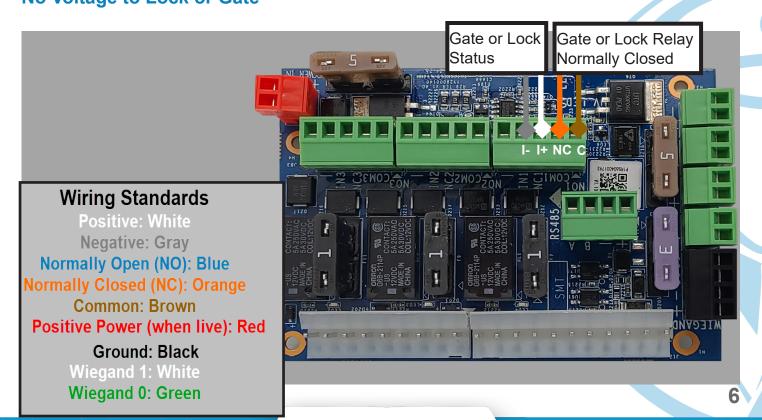




Lock Requiring Constant 12 V: Wet Contact Relay, Normally Open

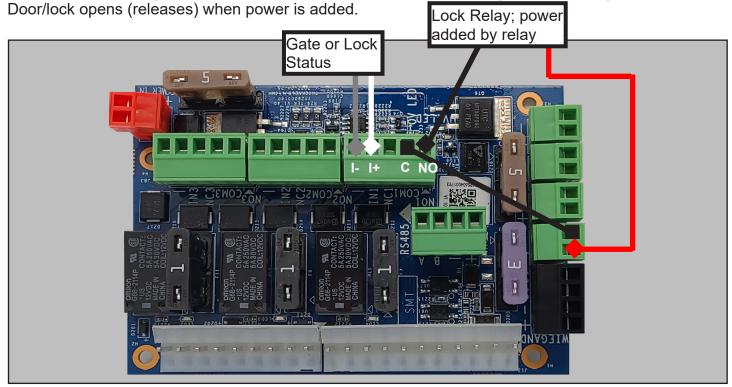


Lock Requiring Constant 12 V: Wet Contact Relay, Normally Closed

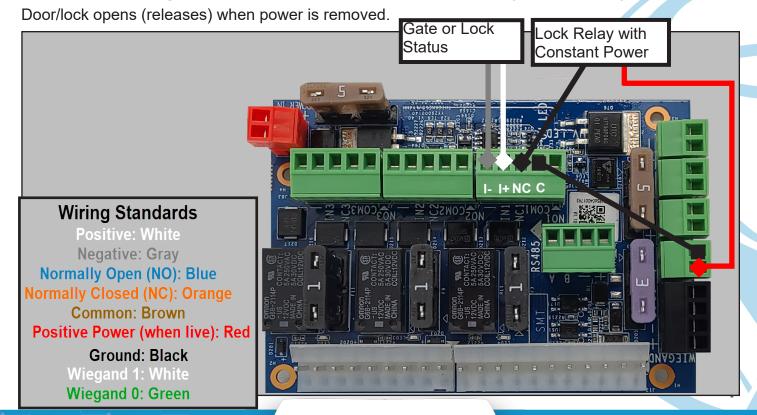





Wiegand Wiring to Board and Direct to Faceplate, 26 Bit Reader To Interface Board

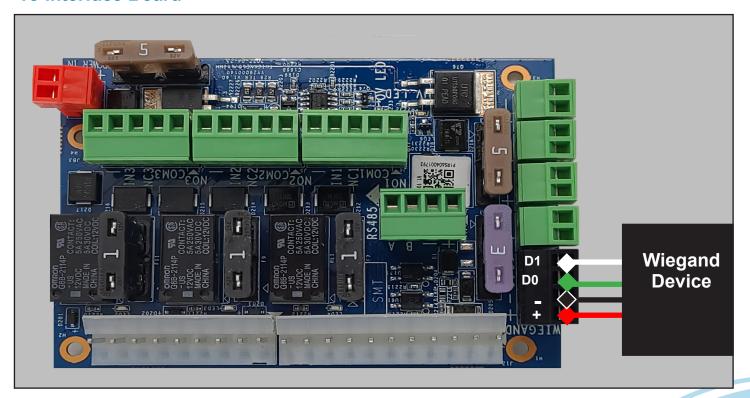



by) (cellgate

Expansion Boards

Install One Expansion Board

The WXL allows the addition of an expansion board.

Expansion Board with 6" cable and mounting hardware Part#: CB-WIM 2000


Metal Mounting Plate (with 15-inch cable) Part #: CB-WIM 4000




Power off the device before you begin!


Installation

- Use the key to open the WXL box.
 The Industrial Ethernet Switch is labeled.
- 2. Unscrew and remove the Ethernet switch. Set the screws aside so you can use them to reattach the plate.




Expansion Board 1 has jumpers on R36, R35, and R34. Ensure that Board 1 is on the right.

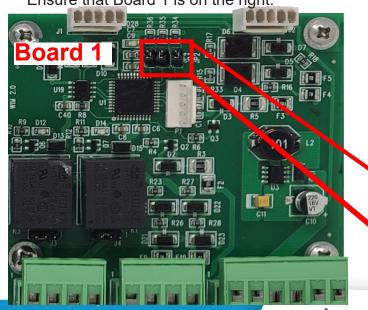

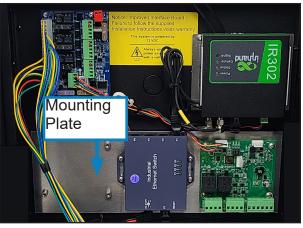






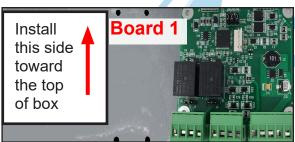

NOTE If you've ordered expansion boards, they may be already installed.



Jumpers: R36, R35, R34



by) (cellgate


- Reattach the Ethernet switch, port side-up, in the center of the expansion board using the screws from the shipment.
- 5. Connect the cables included in the shipment and the Ethernet switch.
- Connect the expansion board to the RS485 and original WXL circuit board, as shown below.
 Close the box and reattach it next to the gate.
 You are now ready to use your WXL.

NOTE


The RS485 is on the right. The internal Wiegand port is on the left.


Do not plug the expansion board into the Wiegand.



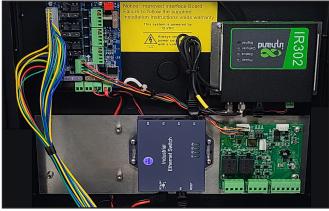

Internal Wiegand Port

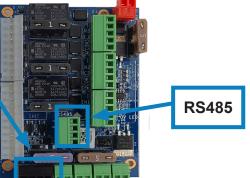

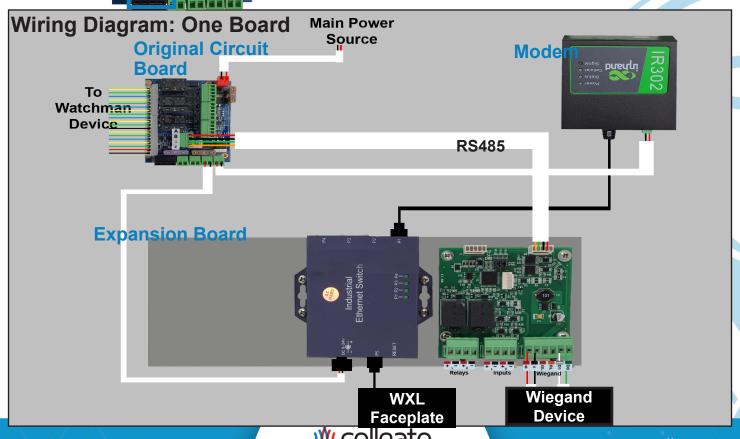


Add Another Expansion Board

- 1. Unscrew and remove the Ethernet switch. Set the screws aside so you can use them to reattach the switch.
- 2. Ensure that Board 1 is on the right and Board 2 is on the left. Expansion Board 1 has jumpers on R36, R35, and R34.


Expansion Board 2 has jumpers on R36 and R35 (see below).





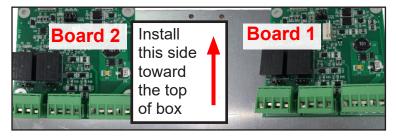


Board 2

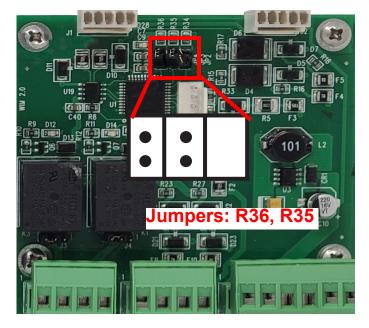

- 3. Reattach the Ethernet switch, port side-up, in the center of the expansion board.
- 4. Connect the board with the jumper cables.

Board 1

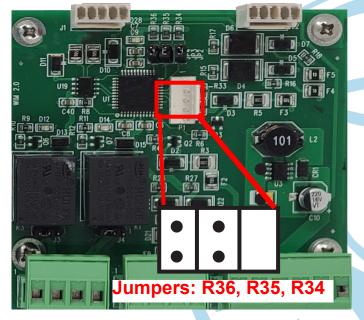







by) (cellgate

5. Install Expansion Board 2 on the left side of the mounting plate. Check that you have jumpers on R34 and R35. Connect the expansion board to the RS485 and original WXL circuit board, as shown below. Close the box and remount it. You are now ready to use your WXL.

Internal Wiegand


Port

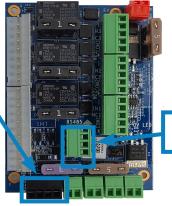

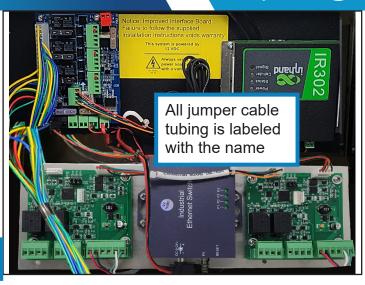

WXL Layout with Both Expansion Boards Connected

RS485

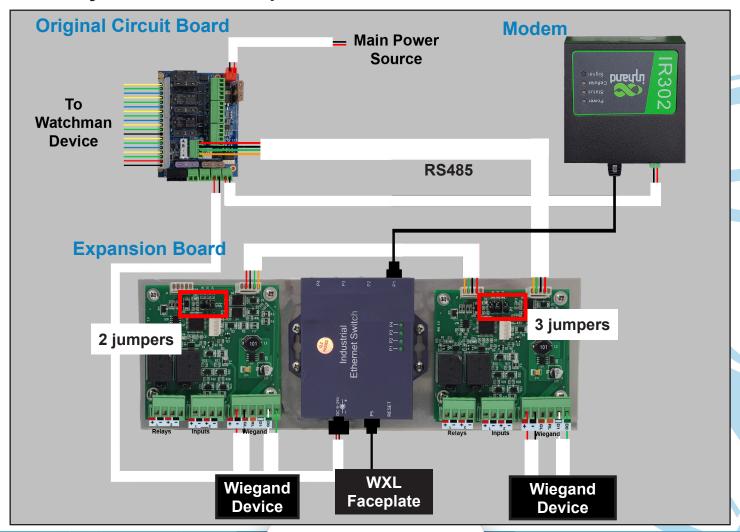





Magnetic Switch Setup


NOTE

Gate statuses can be inverted. If needed, please call CellGate to invert.

The Mag Switch can be placed anywhere that allows A and B to be pulled at least 2 inches away from each other when the gate is open and within 1.5 inches when the gate is closed.

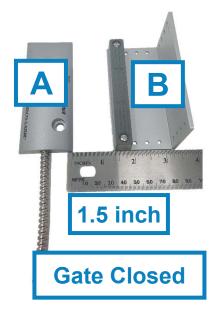

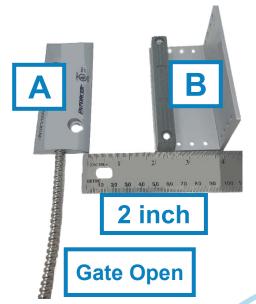

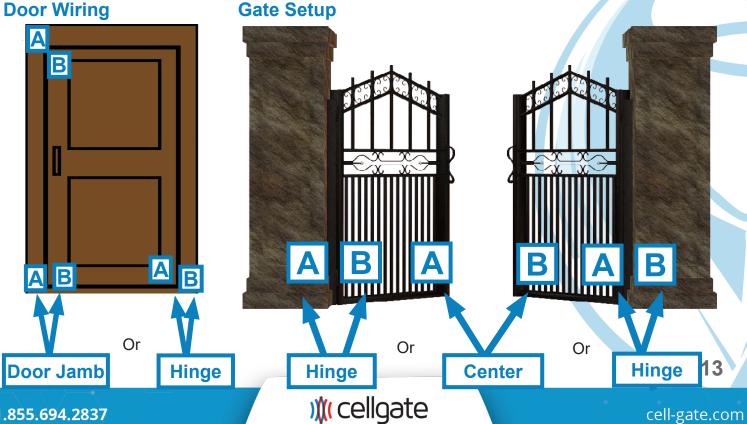





Optional External Camera Wiring




Do not make electrical connections to camera with the system energized. This will damage the camera and is not covered under the camera warranty.







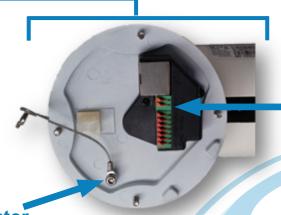

Ethernet Connector


NOTE


Not compatible with VPN device numbers: CAM 292, 293, 295, 296.




Mounting Illustrations

Mounting to Architectural Post (Standard Pedestal Mount)

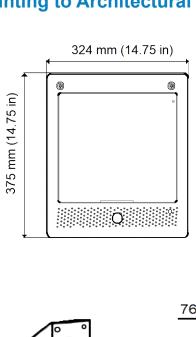

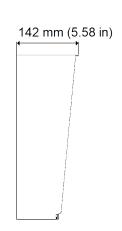



Part #: ENC-WFM1005

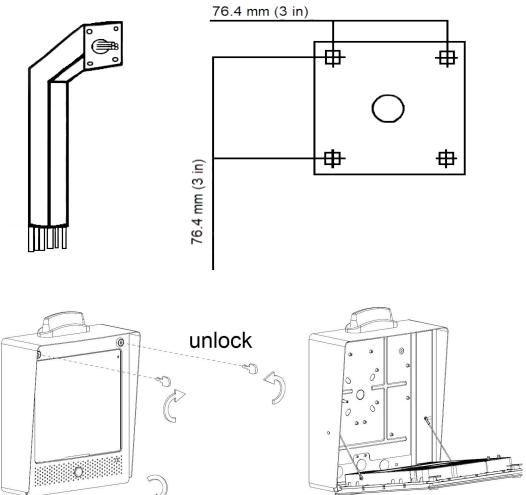



Mounting to Architectural Post (Standard Pedestal Mount) (Continued)

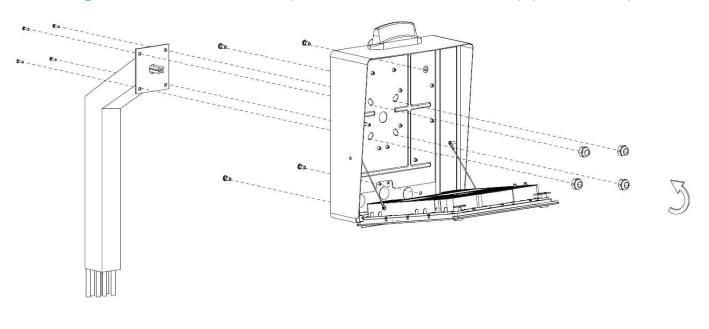

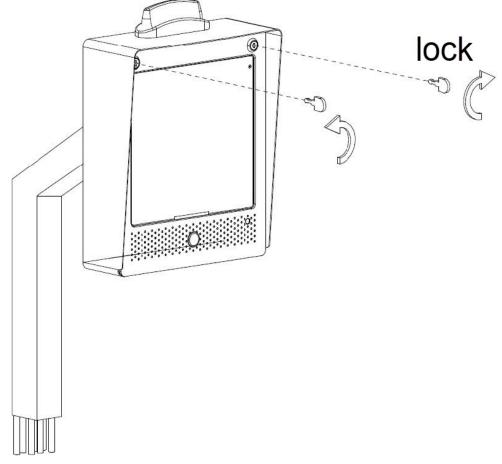







Mounting to Architectural Post (Type B)


Part #: ENC-WFM1006

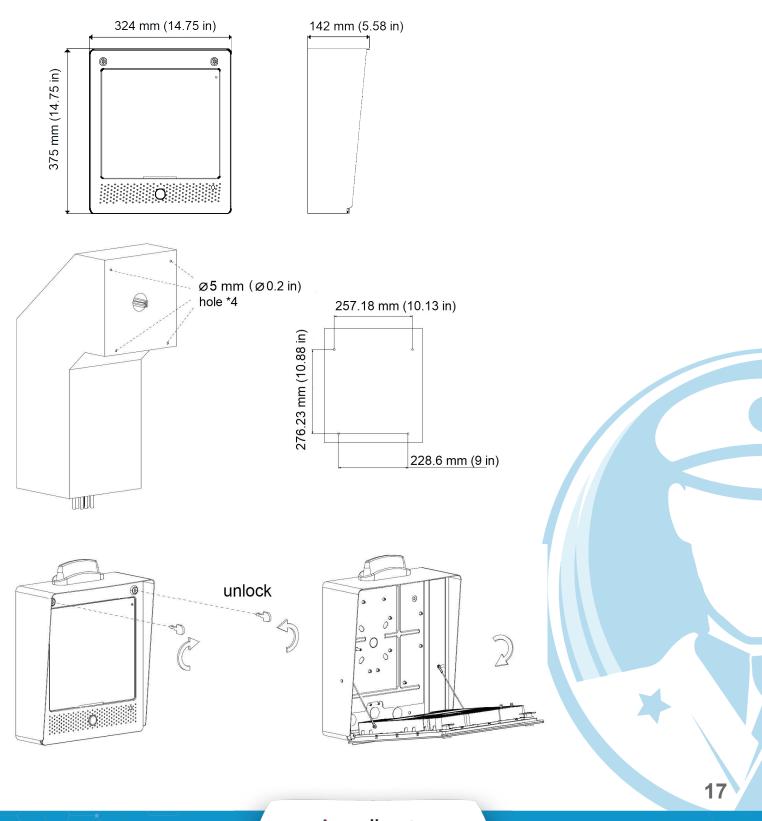



Mounting to Architectural Post (Type B) (Continued)

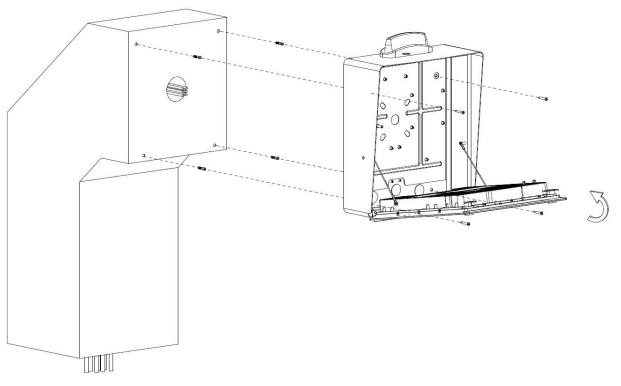

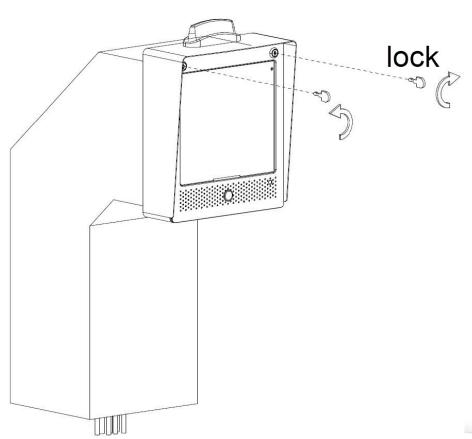











Mounting to Surface

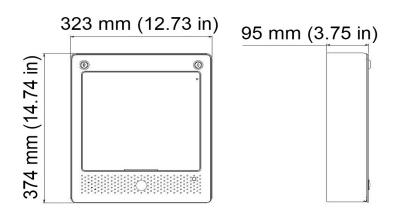


Part #: AA1XLPE VZN

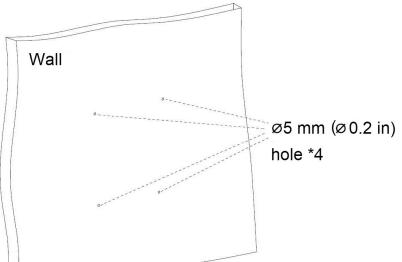

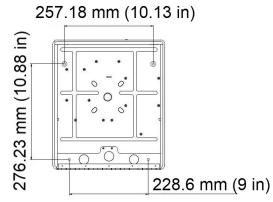


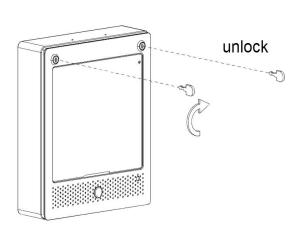


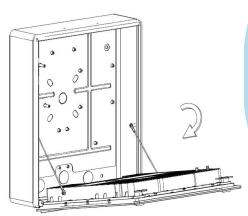




Mounting to Surface (Continued)

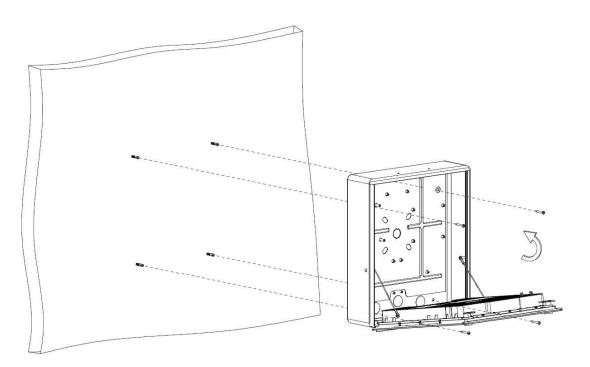

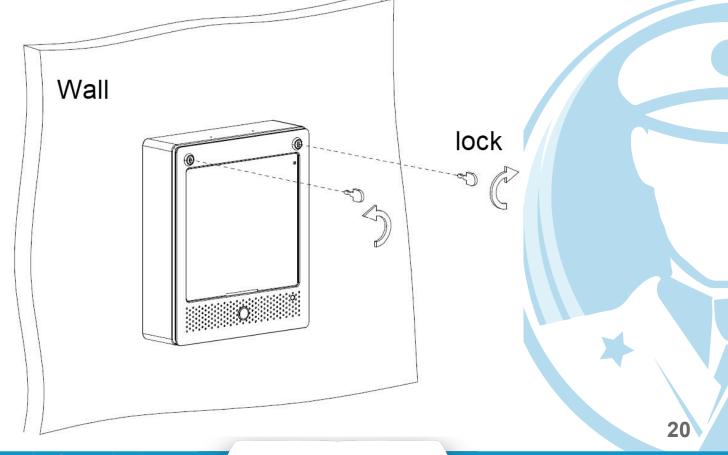






Flush Mounting

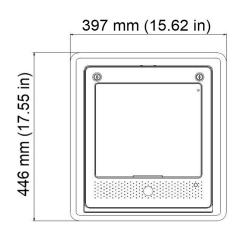


107 mm (4.19 in) 94 mm (3.7 in) Watchman Part #: AA1XLPE, Unit Part #: AA1XLFM, AA1XLFM Flush Mount Kit Part #: ENC-WFM1003, ENC-WFM1004

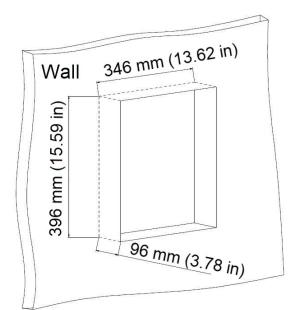

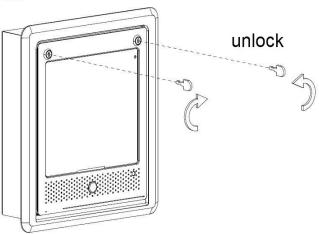


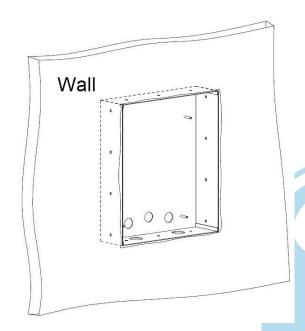


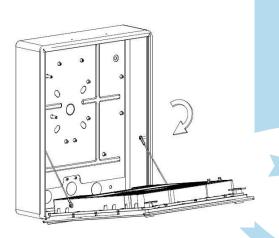



Flush Mounting (continued)

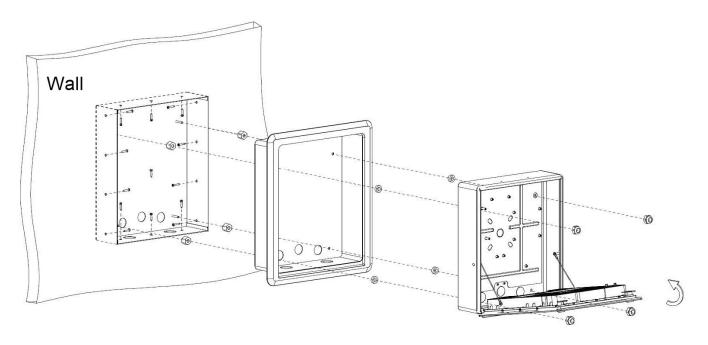

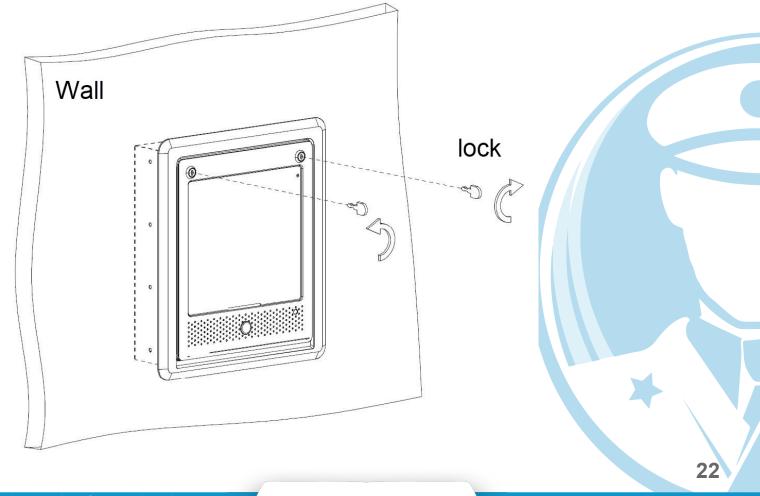




23




Testing

 Enter the Testing Code, then tap the Enter. The Code activates Relay 1 (the gate should open).

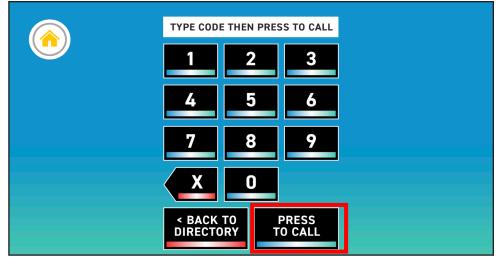

2. From the Home screen, tap **Directory** to open the directory, which lists all callgroups.

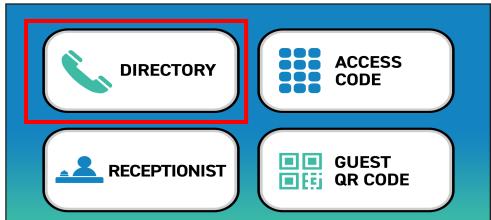

 Tap a callgroup to initiate call. An automated message will play confirming the call was successful.





External Camera Installation

If you're installing an External Camera, call CellGate Technical Support for testing. Technical Support: (972) 231-1999, option 2.



Customer Information

Leave the following items with the Customer:

- Customer Information Packet
- WXL Key
 - Installer keeps one key and gives one key to the customer

cell-gate.com